



HP 550 notebook LCD display Replacement

Follow the guide for the replacement of the LCD display

Written By: Smilzo



INTRODUCTION

Follow the guide for the replacement of the LCD display



TOOLS:

 
- [T15 Torx Screwdriver](#) (1)
 - [Screwdriver, Phillips no. 1](#) (1)
-

Step 1 — LCD display



- remove battery

Step 2

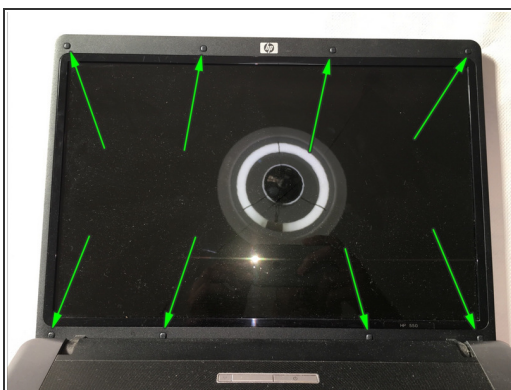


- remove 8 Goma and the underlying screws

Step 3



- help with a fine instrument to separate the LCD frame
- Unhook the cover 2 hinges on the top side

 Step 4

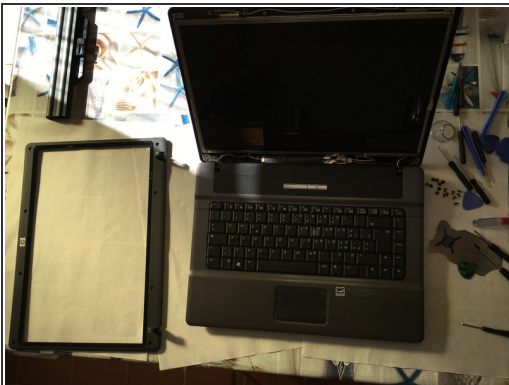

- Remove cover lcd lightly taking care to wires and disconnecting any adhesive if present
- Remove 4 LCD mounting screws on one side and the 4 screws on the other
- Forcing a bit the back cover to access the last of both sides lives

Step 5



- Unhook LCD panel connector
- Place the LCD panel on the keyboard gently
- Unhook display video connector

Step 6



- Remove LCD panel and replace with the new

Per rimontare il dispositivo, segui queste istruzioni in ordine inverso.

This document was last generated on 2017-06-17 09:07:40 PM.